



LADDER USER MANUAL



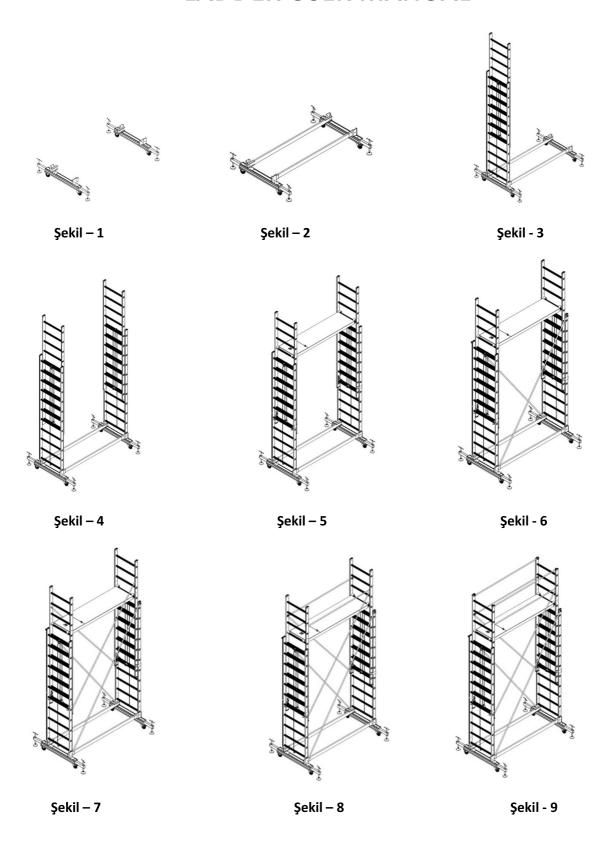

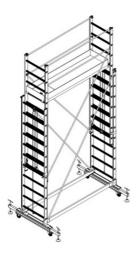

Şekil - 10

LADDER USER MANUAL

Before Use

- a) Ensure that you are fit enough to use a ladder. Certain medical conditions or medication, alcohol or drug abuse could make ladder use unsafe,
- b) When transporting ladders on roof bars or in a truck, ensure they are suitably placed to prevent damage,
- c) Inspect the ladder after delivery and before first use to confirm condition and operation of all parts,
- d) Visually check the ladder is not damaged and is safe to use at the start of each working day when the ladder is to be used,
- e) For professional users regular periodic inspection is required,
- f) Ensure the ladder is suitable for the task,
- g) Do not use a damaged ladder,
- h) Remove any contamination from the ladder, such as wet paint, mud, oil or snow,
- i) Before using a ladder at work a risk assessment should be carried out respecting the legislation in the country of use.

Positioning and Erecting the Ladder

- a) Ladder shall be erected at the correct position, such as the correct angle for a leaning ladder (angle of inclination approximately 1:4) with the rungs or treads level and complete opening of a standing ladder
- b) Locking devices, if fitted, shall be fully secured before use,
- c) Ladders shall be on an even, level and unmoveable base,
- d) Leaning ladder should lean against a flat non-fragile surface and should be secured before use, e.g. tied or use of a suitable device,
- e) Ladder shall never be repositioned form above,
- f) When positioning the ladder take into account risk of collision with the ladder e.g. from pedestrians, vehicles or doors. Secure doors(not fire exixts) and windows where possible in the work area,
- g) Identify any electrical risks in the work area, such as overhead lines or other exposed electrical equipment,
- h) Ladder shall be stood on its feet, not the rungs or steps,



i) Ladders shall not be positioned on slippery surfaces (such as ice, shiny surfaces or significantly contaminated solid surfaces) unless additional effective measures are taken to prevent the ladder slipping or ensuring contaminated surfaces are sufficiently clean.

Using the Ladder

- a) Do not exceed the maximum total load for the type of ladder,
- b) Do not overreach, user should keep their belt buckle (navel) inside the stiles and both fee,step/rung throughout the task,
- c) Do not step off a leaning ladder at a higher level without additional security, such as tying off or suitable stability device,
- d) Do not use standing ladders for access to another level,
- e) Do not stand on the top three steps/rungs of a leaning ladder,
- f) Do not stand on the top two steps/rungs of a standing ladder without a platform and hand/knee rail,
- g) Do not stand on the top four steps/rungs of a standing ladder with an extending ladder at the top,
- h) Ladders should only be used for light work of short duration,
- i) Use non-conductive ladders for unavoidable live electrical work,
- j) Do not use the ladder outside in adverse weather conditions, such as strong wind,
- k) Take precautions against children playing on the ladder,
- 1) Secure doors (not fire exits) and windows where possible in the work area,
- m) Face the ladder when ascending and descending,
- n) Keep a secure grip on the ladder when ascending and descending,
- o) Do not use the ladder as a bridge,
- p) Wear suitable footwear when climbing a ladder,
- q) Avoid excessive side loadings e.g. drilling brick and concrete,
- r) Do not spend long periods on a ladder without regular breaks (tiredness is a risk),
- s) Leaning ladders used for access to a higher level should be extended at least 1 m. above the landing point,
- t) Equipment carried while using a ladder should be light and easy to handle,
- u) Avoid work that imposes a sideways load on standing ladders, such as side-on drilling through solid materials (e.g. brick or concrete)
- v) Maintain a handhold whilst working from a ladders or take additional safety precautions if you cannot.

Repair, Maintenance and Storage

Repairs and maintenance shall be carried out by a competent person and be in accordance producer's instructions.

Reparirs must be carried out by authorized or certified persons.

Please, contact the company before repairing the ladder.

Ladder should be stored in a safe way that guarantees no damage.

Ladder must be protected while being carried from falling or hitting any other surfaces.



_			_	
For		11	21	-
F()[ГΙ			- /

Use only with activated brakes.

Stabilizers should be used by opening or fixing on flat surface.

	Result of Control		
CONTROL PARAMETERS	YES	NO	
Side legs control			
Lock mechanisms control			
Security bars control			
Working platform control			
Plastic items control			
Wheel break control			
Label control			
Is the label properly stuck?			
Packing control			

Product Code:		
Inspector:		
Inspection Date:		

ALUMINUM MEGA SCAFFOLDING INSTALLATION MANUAL



HIGHENOVALNI NA KAZDYM SZCZEBLU










LADDER

MODEL	EXPLANATION	PCS
7507	2x7	2
7509	2x9	2
7511	2x11	2
7513	2x13	2
7515	2x15	2


PRODUCT FEATURES

MODEL	PLATFORM HEIGHT	WORKING HEIGHT	WEIGHT
7507	2053	4000	
7509	3133	5000	
7511	4213	6000	
7513	5023	7000	
7515	6103	8000	
7519	8263	10000	

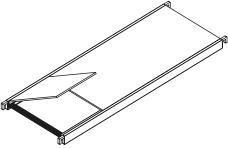

PLATFORM

MODEL	PCS
7507	1
7509	1
7511	1
7513	2
7515	2
7519	2

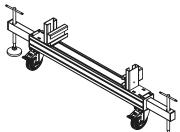


BOTTOM LOG

MODEL	PCS
7507	2
7509	2
7511	2
7513	2
7515	2
7519	2



П	MODEL	PCS
	7507	1
	7509	1
	7511	1
	7513	1
	7515	1
	7519	1

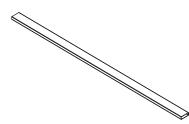

		$\overline{}$	_		_
$\mathbf{\nu}$	$\boldsymbol{\sim}$	<i>(</i>)	-	ш	-
		v		ш	ᆫ

	MODEL	PCS
	7507	2
	7509	2
	7511	2
	7513	2
)	7515	2
	7519	2




MODEL	DIMENSION	PCS
7507	242 cm DIAG. 187,5 cm DIAG. 168 cm DIAG.	2 2 6
7509	281 cm DIAG. 216,5 cm DIAG 168 cm DIAG.	2 . 2 . 6
7511	324 cm DIAG. 254,5 cm DIAG 168 cm DIAG.	2 . 2 . 6
7513	371 cm DIAG. 296,5 cm DIAG 168 cm DIAG.	2 . 2 . 8
7515	419,5 cm DIAG 343,5 cm DIAG 168 cm DIAG.	
7519	518 cm DIAG. 440 cm DIAG. 168 cm DIAG.	2 2 8



KNOB

MODEL	PCS
7507	16
7509	16
7511	16
7513	20
7515	20
7519	20

NUT SCREW

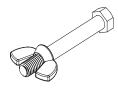


MODEL	PCS
7507	4
7509	4
7511	4
7513	4
7515	4
7519	4

Keep the assembly manual together with the user manual.

METHOD OF INSTALLATION;




Insert 2 intermediate profiles into their sockets.

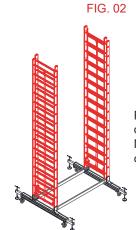


Place the 2 pre-assembled ladders that come out of the package, into their slots.

Make sure that narrower sized ladders are fa cing each other.

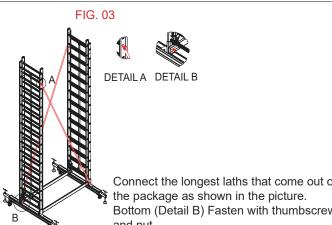

Connect the longest laths that come out of Bottom (Detail B) Fasten with thumbscrew and nut. Top (Detail B) Fasten with the Knob.

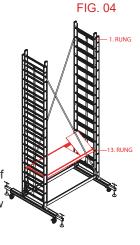


Applies to products with 2 platforms. Step rank to fix the platform.

7513 - 12th rung.

7515 - 13th rung.

7519 - 13th rung.

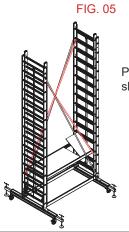

Place the diagonal with the knobs as shown in the picture.


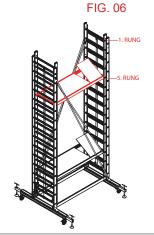


FIG. 08

Valid for all the series; Place the platform at 5th rung from the



here are 3 laths each on the right and let for the upper platform. he lower bar is only available in 7513-7515-7519.

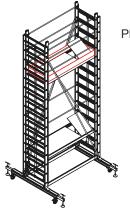

Place the toeboard.



Read for the User's Guide.

